

1



2


3

4

5

6

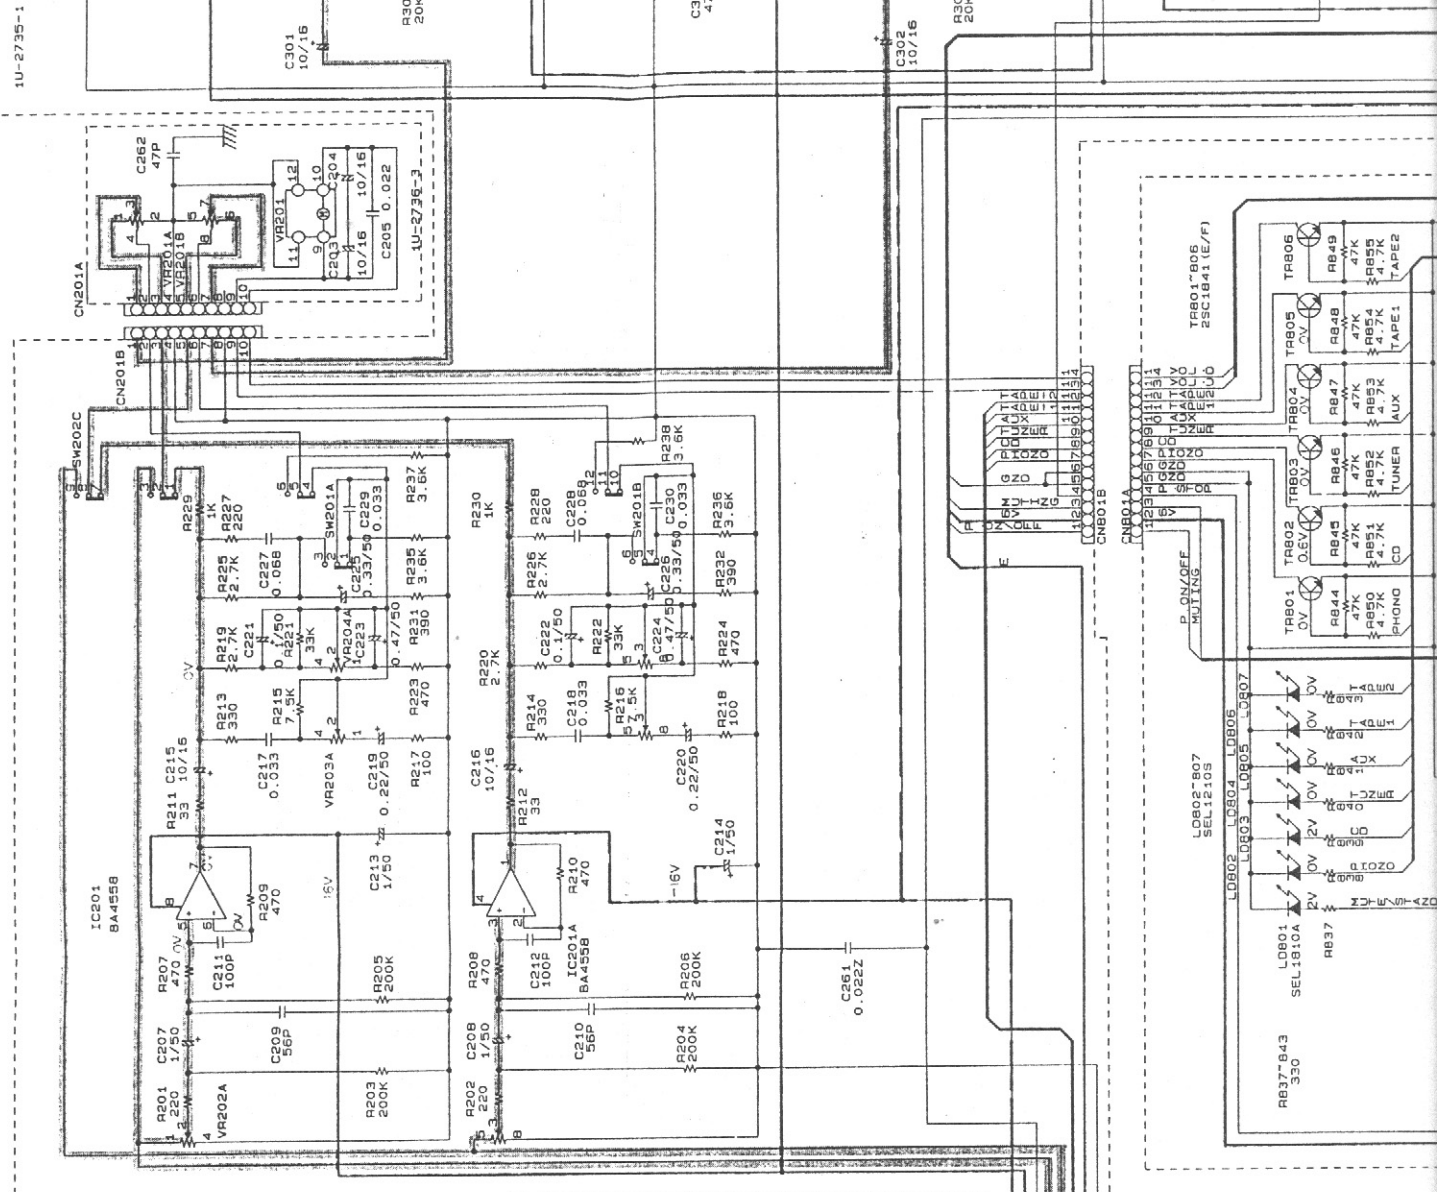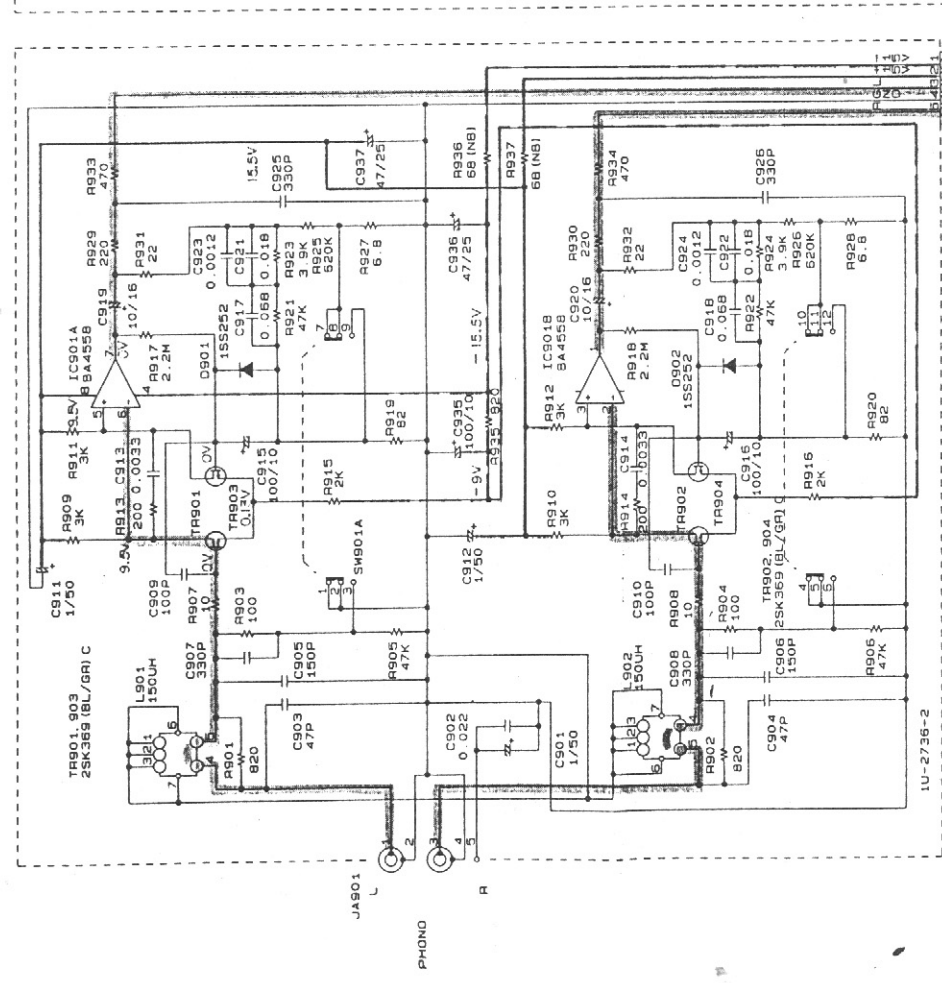

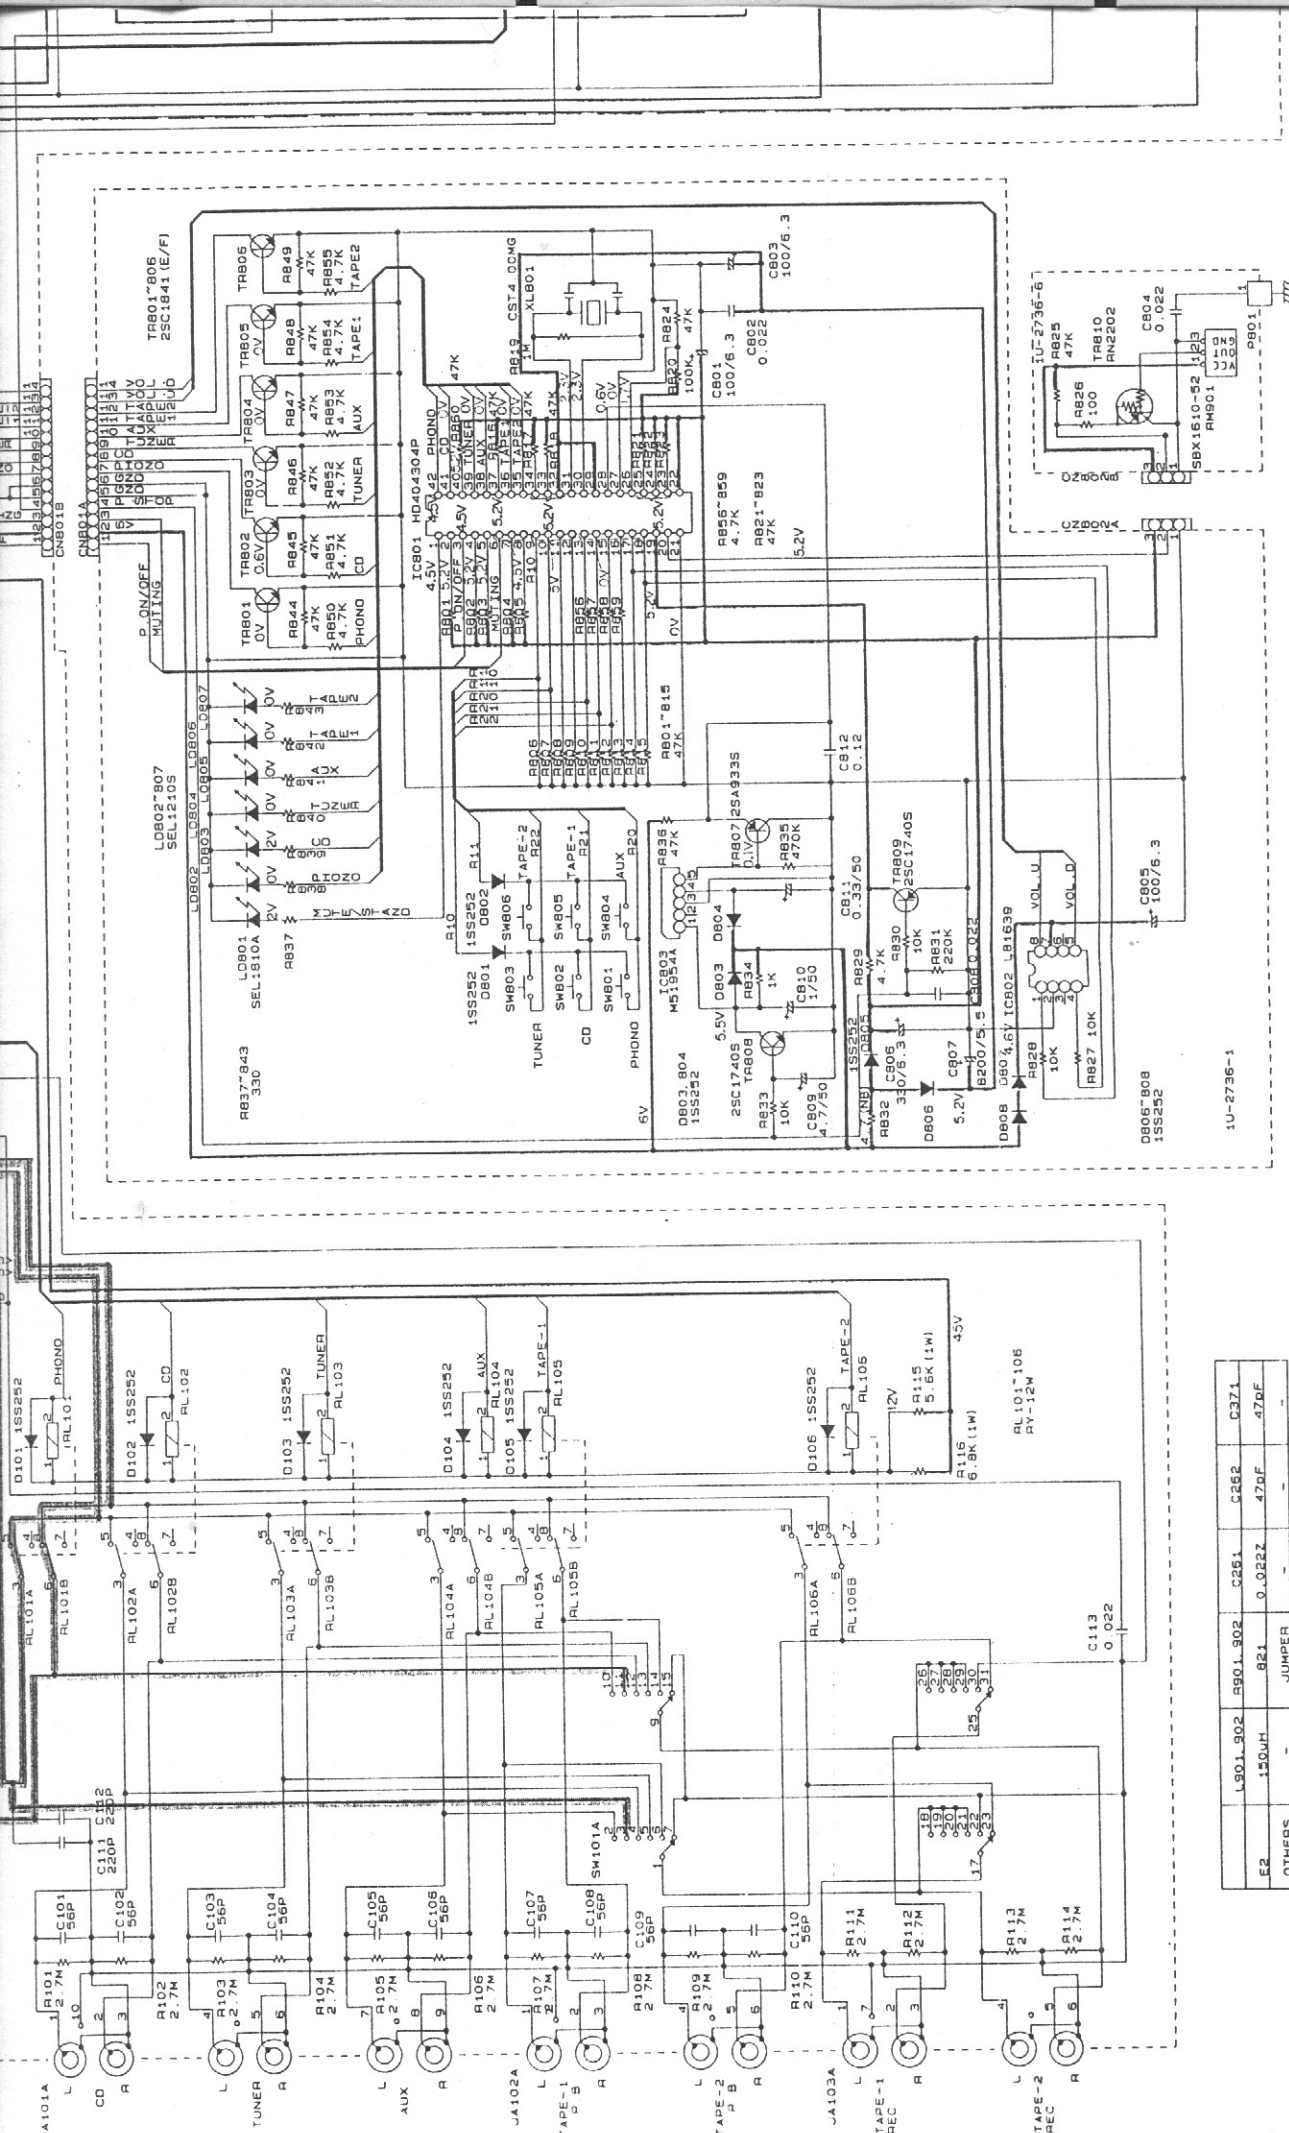

OTHERS	L901-902	R901-902	C251	C252	C371
E2	150uH	821	0.022	470F	470F
		JUMPER			

NOTES
 ALL RESISTANCE VALUES IN OHM. k=1,000 OHM.
 M=1,000,000 OHM.
 ALL CAPACITANCE VALUES IN MICRO FARAD.
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

WARNING:
 Parts marked with this symbol  have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
 Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamperes, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is

